

# Fryer's Kits

[Home](#) [Trebuchet Base](#) [Uprights](#) [Swinging Arm](#) [Sling Setup](#)

## Making the Uprights

Cut out, score parts 5, 6, 7, and 8.

Roll paper lengths (parts 9, 10) 4-5 times around a cylindrical pencil so that it is a tight but not stuck, glue.


Put paper tubes against pivot holes and score around them, and cut radial lines up to score mark.



Fold and glue parts 5, 6, 7, and 8. On each upright two small tabs must be glued



Glue to base

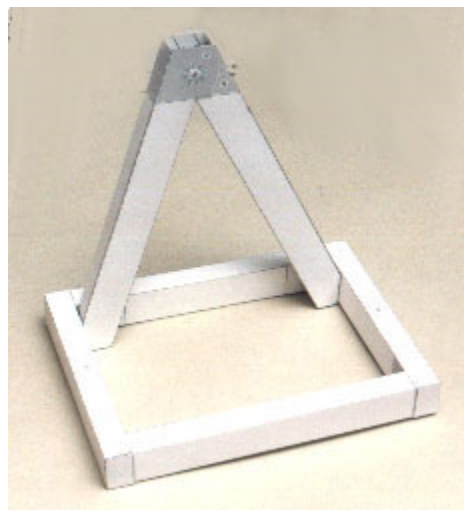

**Fit paper tube part 9 with pencil into holes on upright parts 5, 6. Fit flaps inside. Repeat on other upright.**



**Cut pivot holes as on uprights. Cut out and fold 11, 12 and fit on top of uprights ,flaps folded out.**



**Position first then take apart, glue and fit. Flaps and paper tube should stick out on the outside 5 mm (1/4 inch).**



**Cut out, fold and glue 13, glue to base**

**[Home](#) [Trebuchet Base](#) [Uprights](#) [Swinging Arm](#) [Sling Setup](#)**